# NÖRSKWALL™

## INSTALLATION

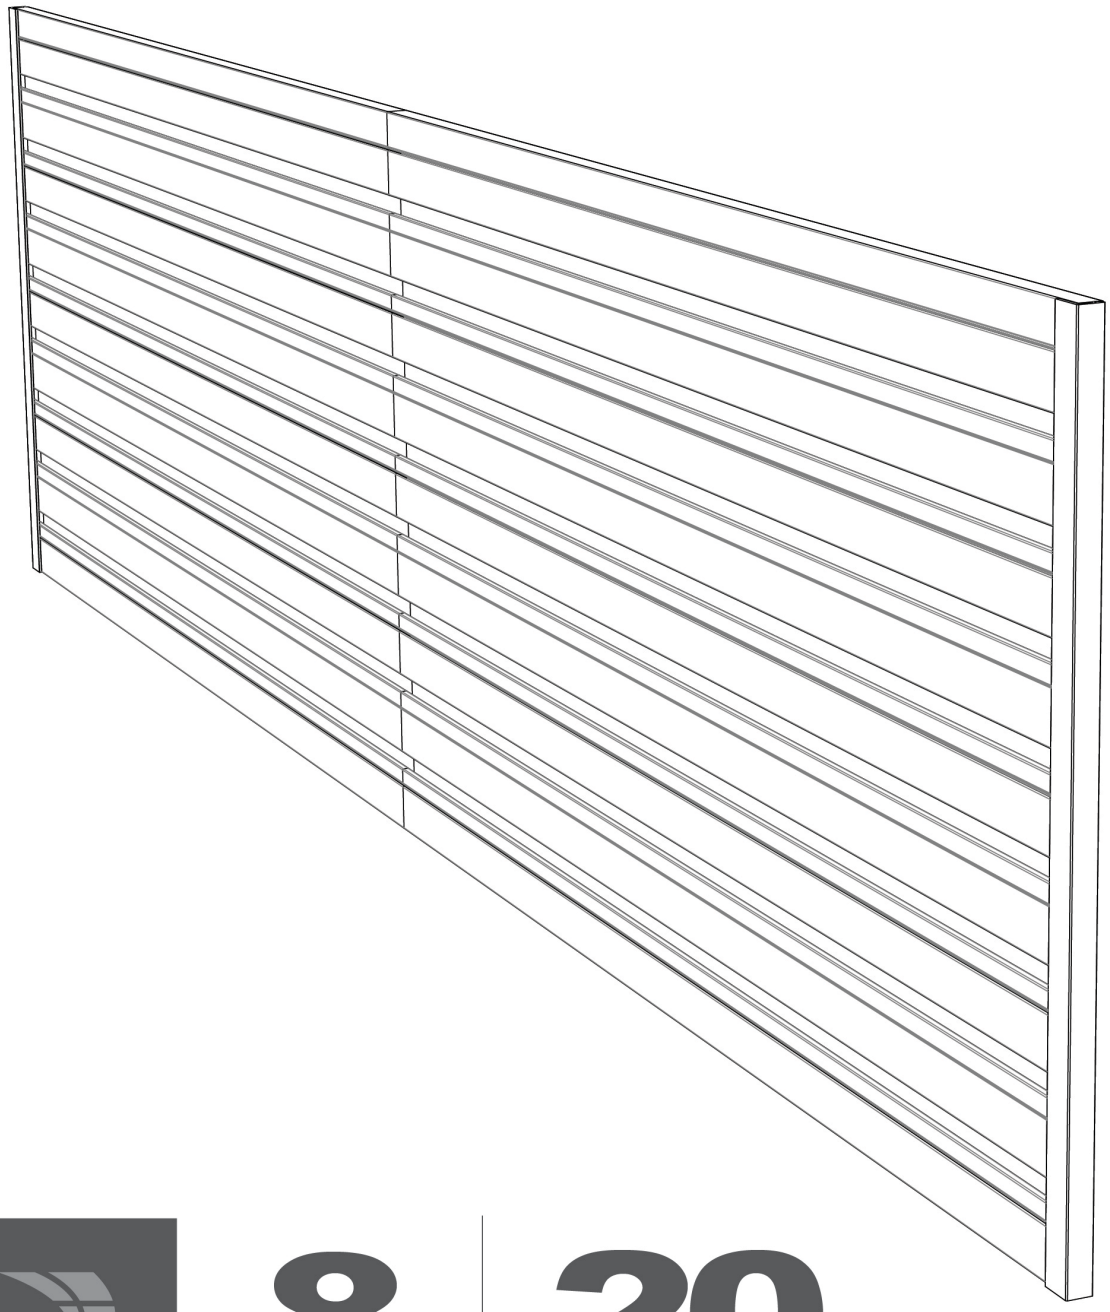

NÖRSK™
QUALITY PRODUCTS SINCE 1999

**8 pcs.**

**20 sq.ft.**

# NORSK WALL™ SYSTEM ASSEMBLY INSTRUCTIONS / 20 SQ.FT.

Tools Required:
-Drill
-Stud finder
-Pencil
-Step stool / ladder
-Level
-Tape measure
-Rubber mallet

For installation instruction videos visit us at:
**www.norsk-stor.com/slatwall-videos.html**

Bottom Rail
x2



Top Rail
x2

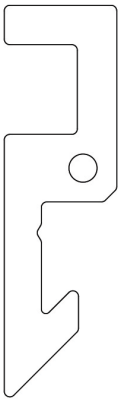

Side Trim
x3

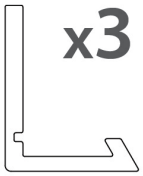

NorskWall Panel
x8

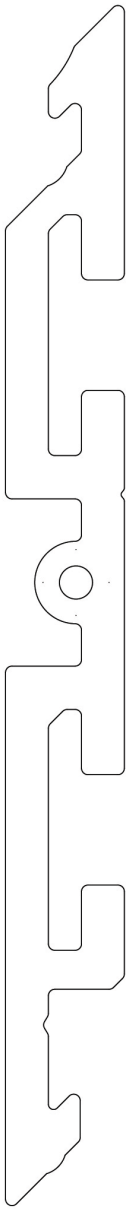

Dowel
x10

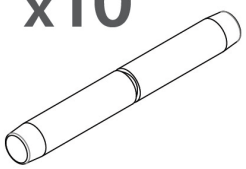

Screws
x40

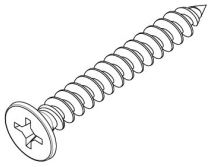

E-Clip
x10

Low Clip
x4

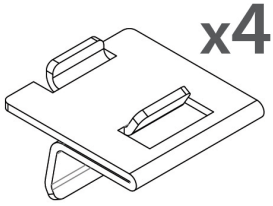

High Clip
x16

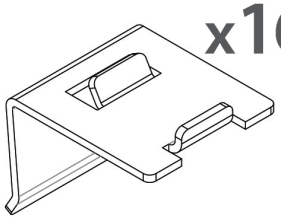

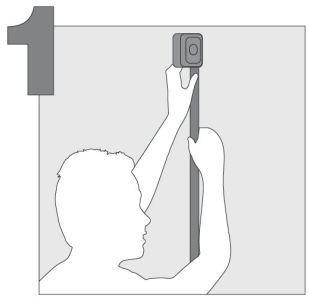

Mark the desired height of the NorskWall™ on your wall.

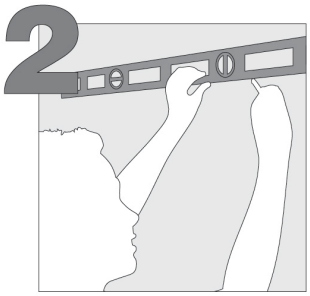

Draw a level line at this point (start at stud) to the end of where you want the NorskWall™ to stop.

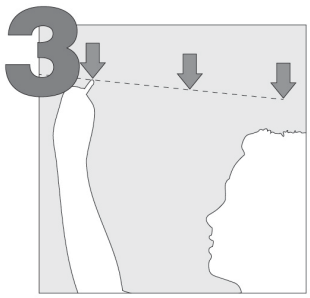

Mark with pencil your stud locations on this level line.

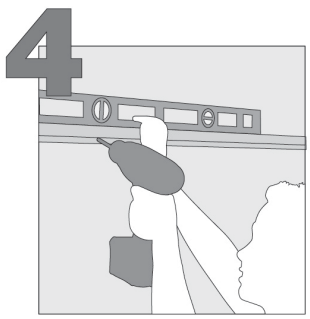

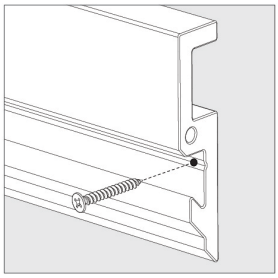

Place Top Rail just above line (so you can see stud marks) make sure it is level and install screws starting them into indented slots at each stud location.

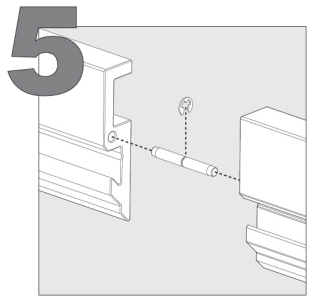

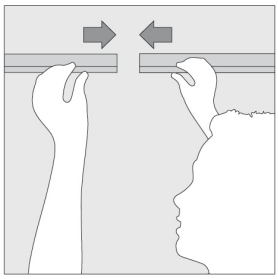

Continue adding more Top Rail across desired line until Top Rail of Track is complete. Make sure you use a Dowel and Retaining Ring in middle of each Dowel to connect each Top Rail together (If possible try to use ½ of one stud for each piece of Top Rail). Lightly tap end of Top Rail with mallet to seat Top Rail onto the Dowel.

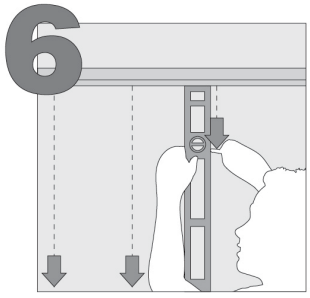

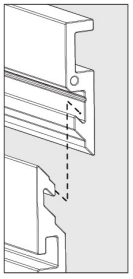

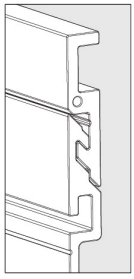

Now that your Top Rail is complete and level use a level and draw a line straight down each stud mark to just below bottom of last panel that you will use for NorskWall™. Now take each NorskWall™ Panel and slide into Top Rail, which will cover screws from previous steps.

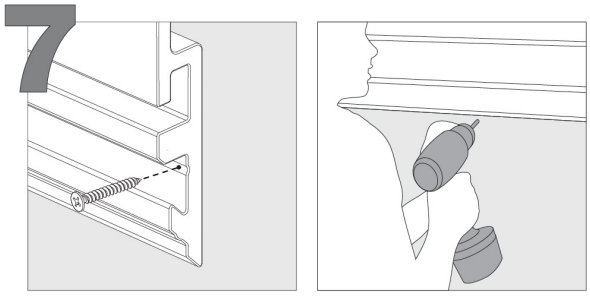


Install screws in bottom Panel again where indent is located and where you have marked the studs.

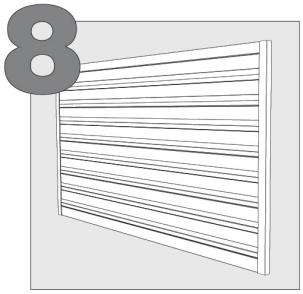


If you are only creating a single column Norsk-Wall™ skip to Step 10.

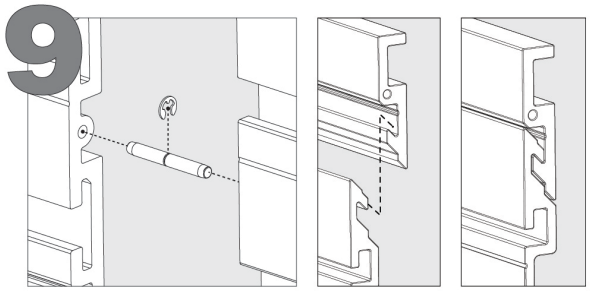


If you are creating a NorskWall™ with multiple columns, add Dowels in each hole with Retaining Rings in middle of each prior to connecting next Panel and repeat Step 6 until all Panels are installed.

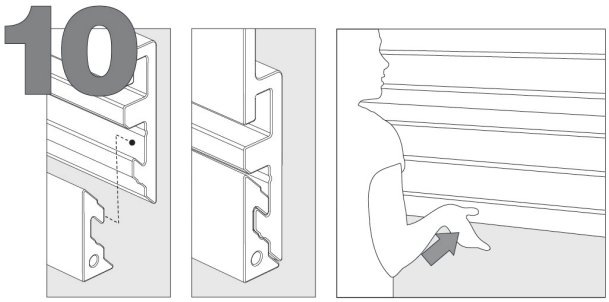


Install Bottom Rail pieces by simply placing them in bottom Panel (where screws are installed) and firmly pushing and locking them in.

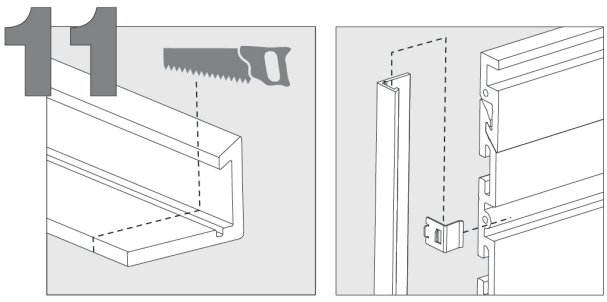


LAST Step: Use long piece of Side Trim and cut to size (hack saw or other appropriate saw for cutting PVC) and install Side Trim Clips (1 Clip per Track) by sliding Clip(s) onto rail located in Side Trim and snap into side of Track.

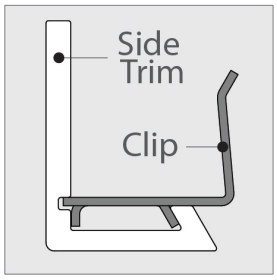


For installation instruction videos visit us at:
**www.norsk-stor.com/slatwall-videos.html**